



HDT02-K

HDD/SSD

Destroyer

User Manual vA.01



Product Disclaimer3

Warranty3

Piracy Statement3

Before You Start4

Notice Symbols4

Product Overview5

Lever Assembly6

Punch Assembly7

How to Fix to a Workbench.....8

General Usage9

Size Adjustment10

Product Disclaimer

U-Reach is not accountable for any incidental or consequential damages, which includes, but is not constrained to property harm, loss of time or data from use of a U-Reach product, or any other damages attributable to product malfunction or failure (including without limitation, those attributable to: (1) reliance of the materials provided, (2) costs of product replacement, (3) loss of use, data or profits, (4) delays or business interruptions, (5) and any principle of legal responsibility, arising out of or in reference to the use or overall performance or from delays in servicing or lack of ability to render service) of any U-Reach product. U-Reach makes every effort to ensure proper operation of all products. However, the customer is responsible to affirm that out of the U-Reach product meets the customer's quality requirement. The customer further acknowledges that fallacious operation of U-Reach product and/or software program, or hardware issues, can cause loss of data, defective formatting, or data loading. U-Reach will make efforts to resolve or repair any issues recognized by customer either within the warranty period or on a time and materials basis.

Specifications and features subject to change without notice or obligation.

Warranty

U-Reach provides a basic one-year parts and labor warranty for all of its products (excluding cables, adapters, and other consumable items). An optional extended warranty is also available for an added cost. Telephone and email support is available for the life of the product as defined by U-Reach.

All warranties will be restricted and defined by the market region from which customers purchased.

Piracy Statement

U-Reach accepts no responsibility for copyright infringement or misuse of any U-Reach equipment. Copying all forms of data: audio, video, or software without the permission of the copyright holder is illegal. It is the sole responsibility of the user to ensure that the legal copyrights of the copyright owners are respected.

Before You Start

Important Notice

- Carefully read the entire manual before operating.
- Damage incurred due to non-compliance with our operating instructions will void the warranty.
- Store the equipment safely when not in use and keep out of the reach of children.
- Use product only in a clean, dry, dust free, and ventilated area
- While in use, do not move or remove HDDs.
- Wear protective equipment (PPE) to prevent any potential injuries.

Notice Symbols

Special items, procedures, or notes to be observed prior to use.


Note

Refers to related duplicator operations, special details, tips, or suggestions for operational effectiveness.


Caution

Refers to procedures that need to be adhered to or precautions.

Product Overview

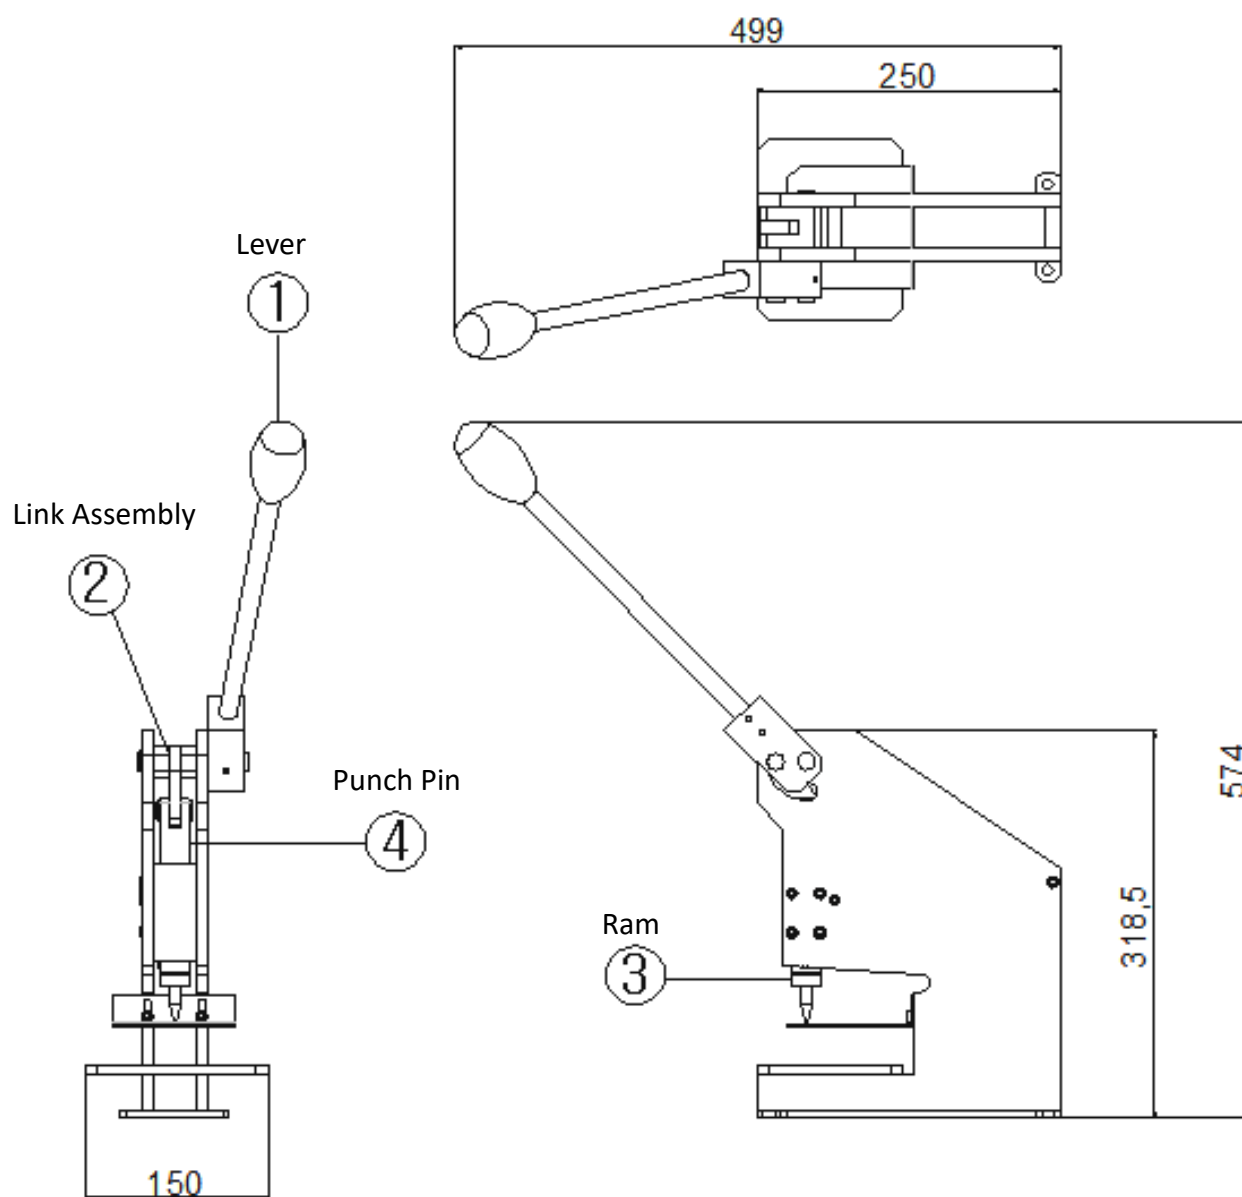


Lever Assembly

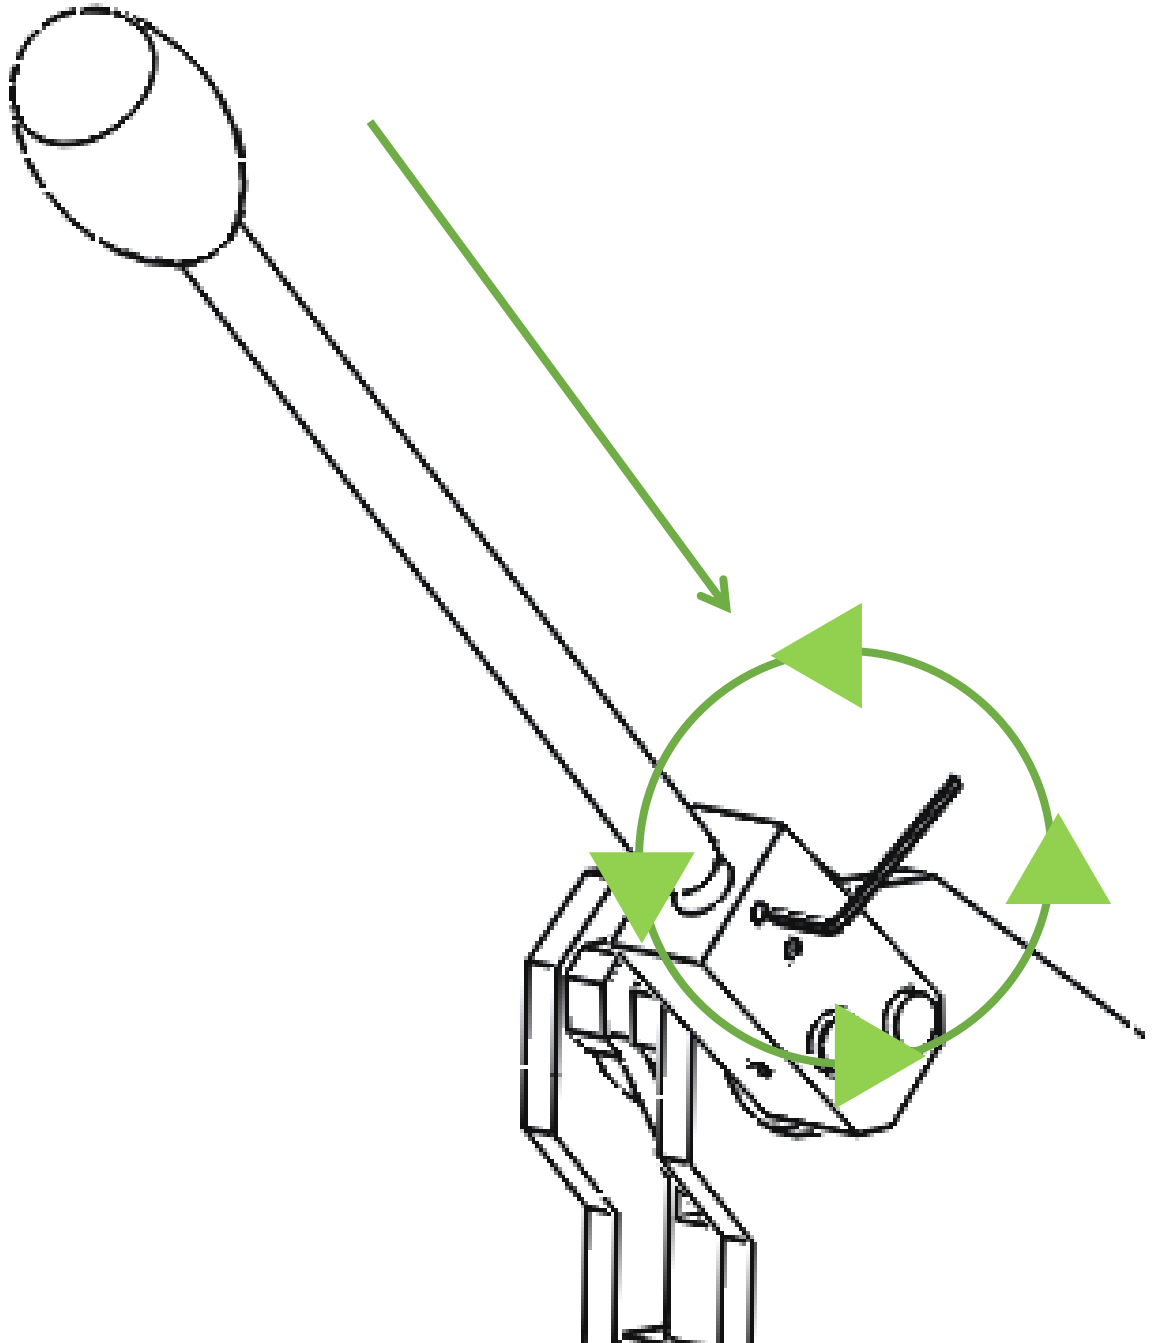

Step 1: Use a 2.5mm L-Wrench, loosen the 2 bolts assembled in the lever fixing block about two turns counterclockwise

Step 2: Insert the lever and turn the bolt clockwise to tighten it


Punch Assembly

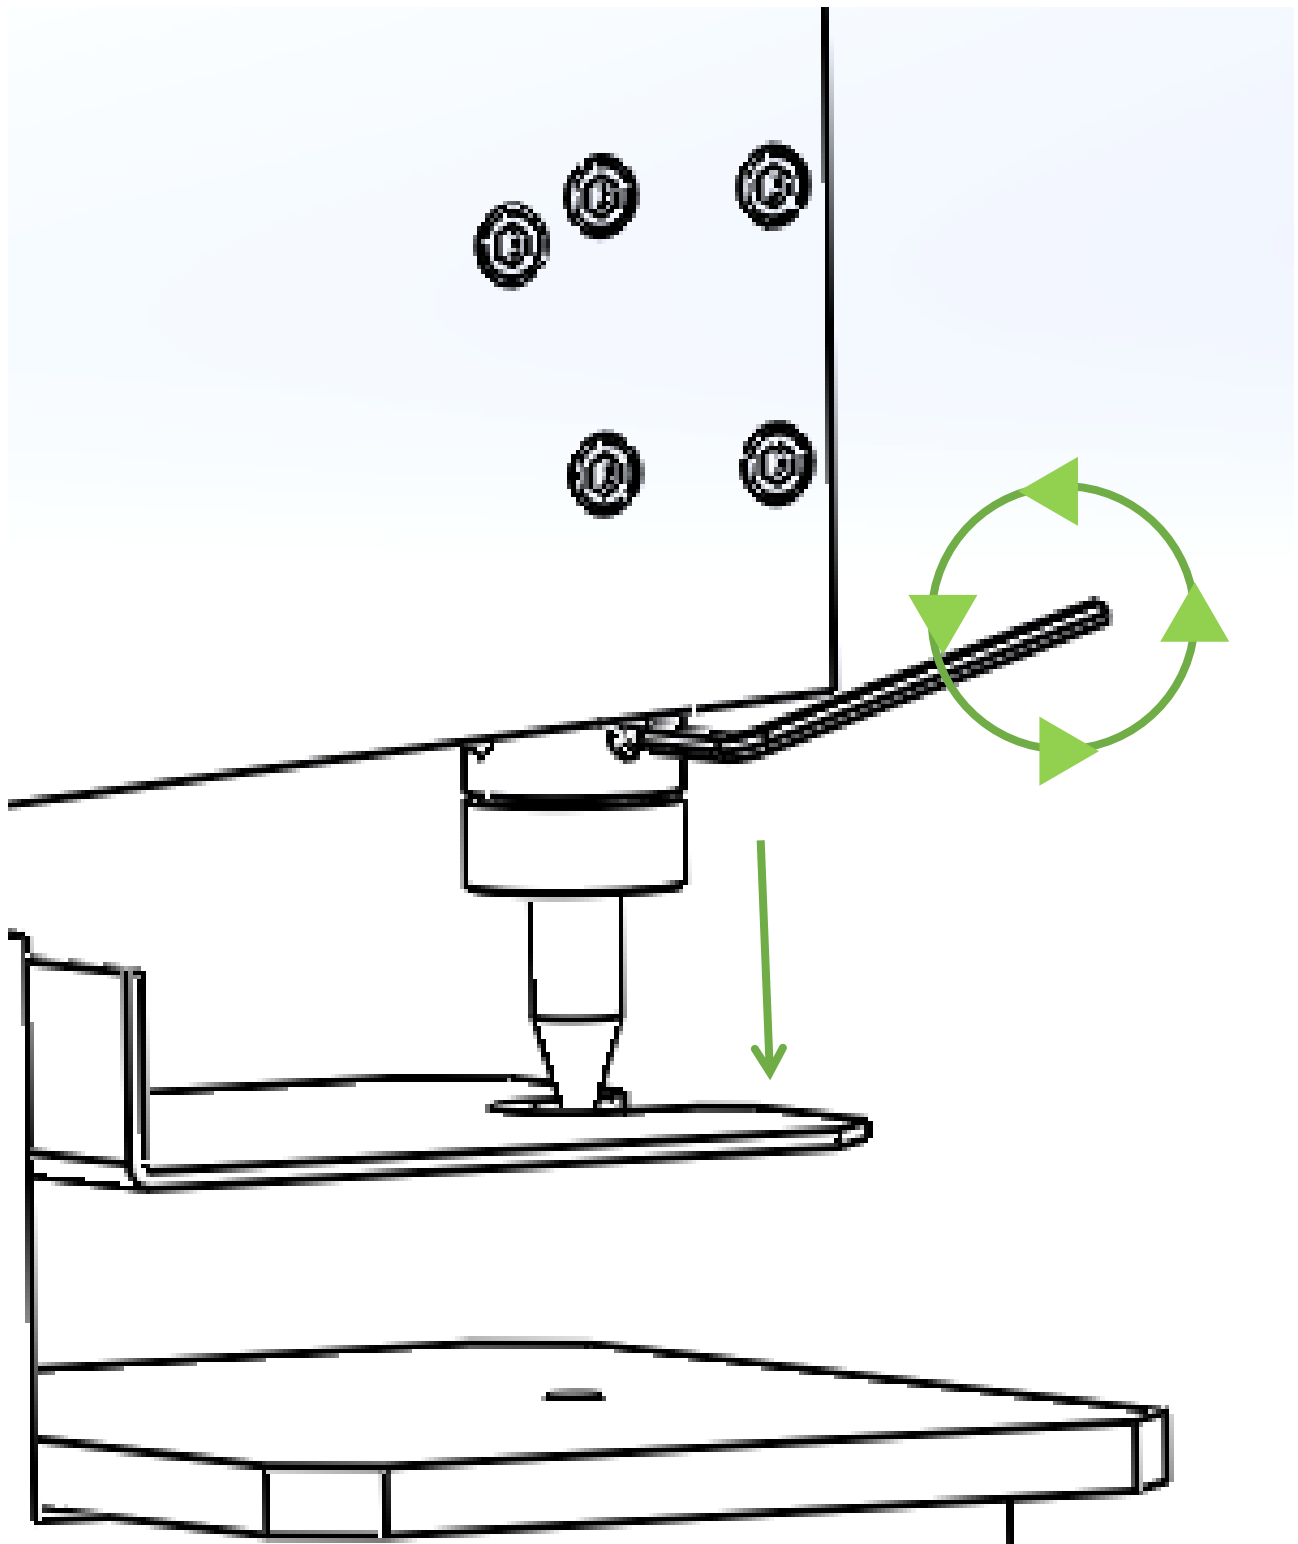

Step 1: Use a 2.5mm L-Wrench, loosen the bolt assembled at the bottom of Ram Piston about 1 turn counterclockwise.


Step 2: Pull the punch down to remove it. Insert the punch and turn the bolt clockwise to tighten it.

How to Fix to a Workbench

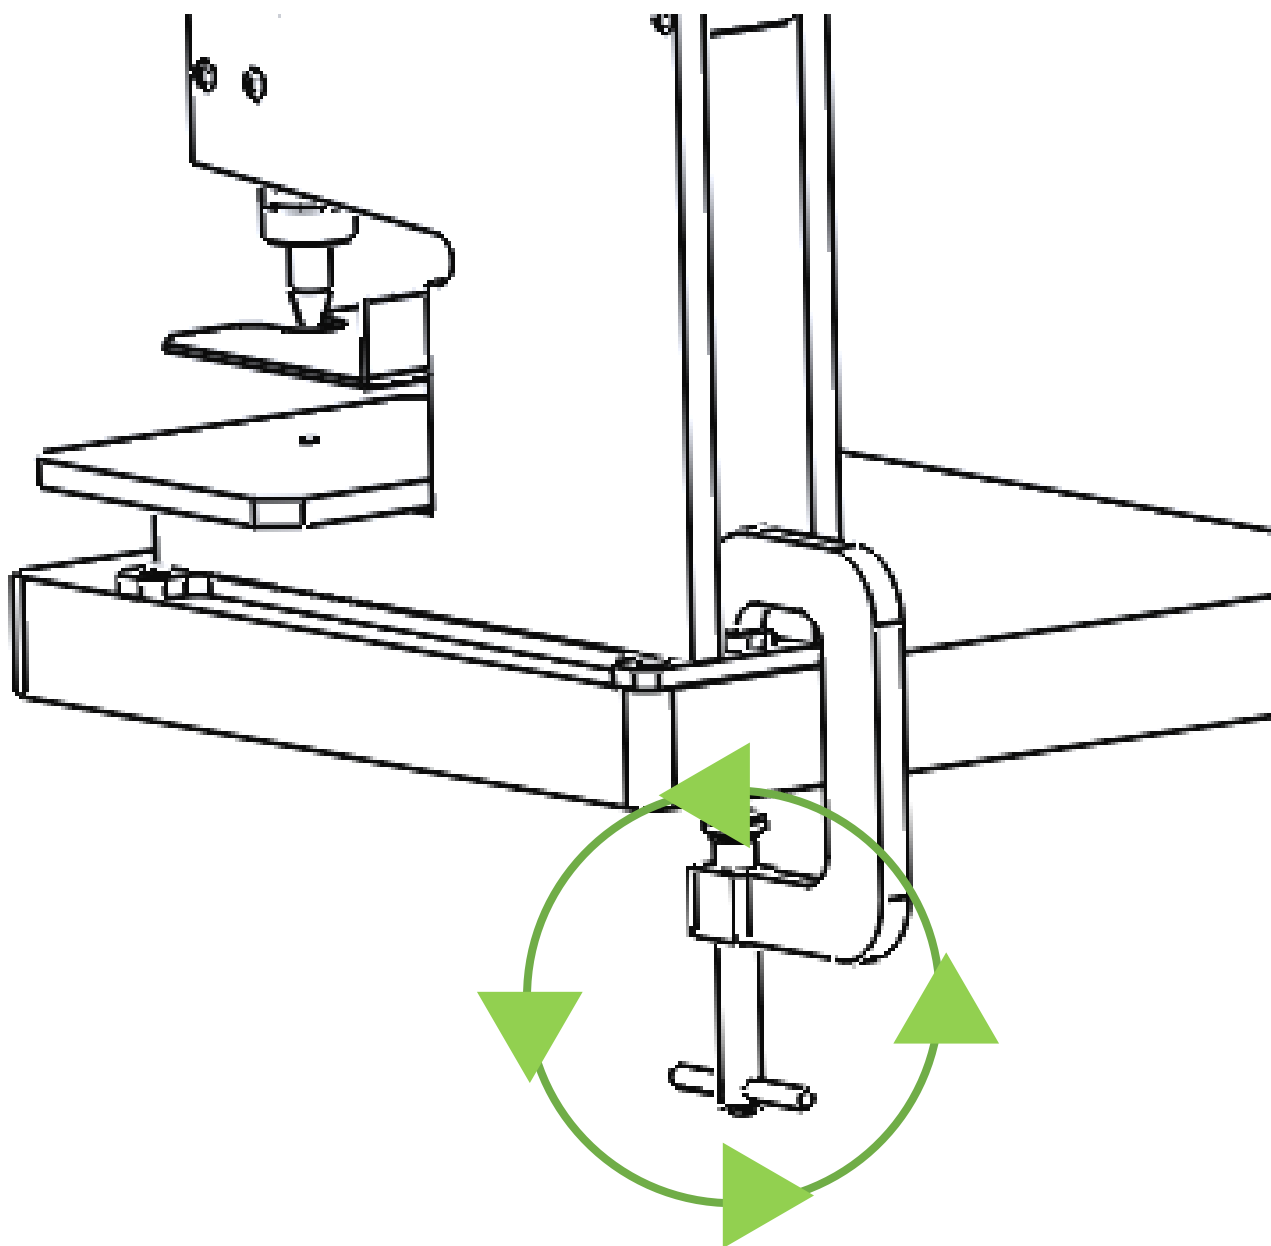

Use the included C-Clamp to attach the back of the HDT02-K to the workbench


General Usage

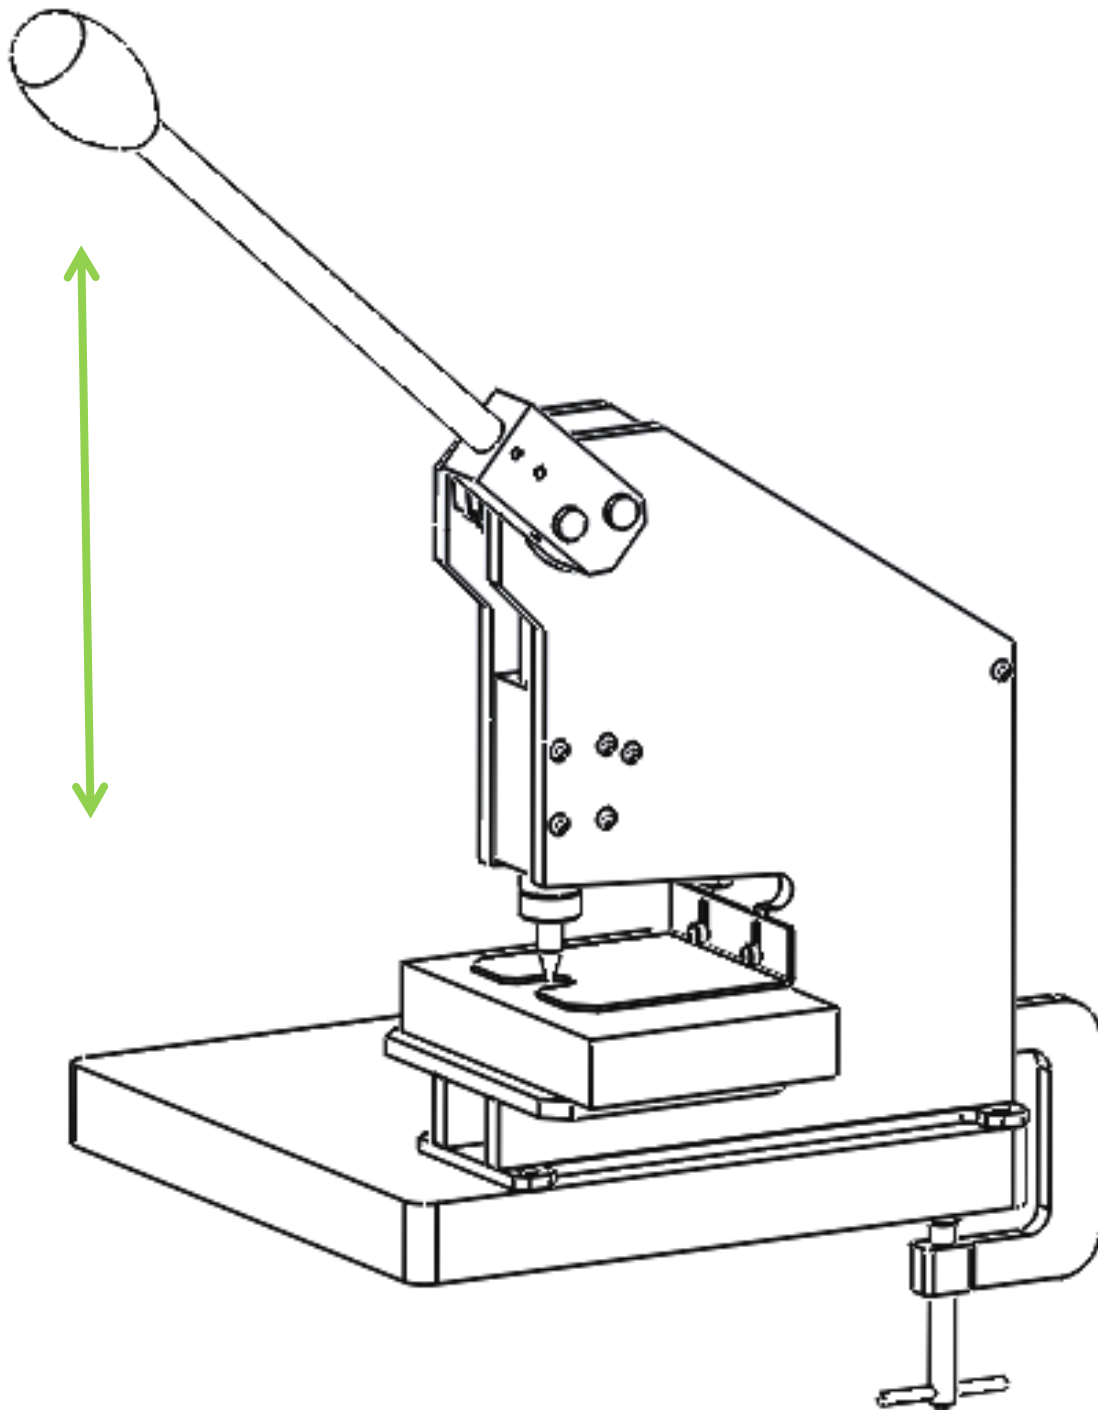

Note

Put the HDD to be drilled on the table under the stop plate and fix it to the position to be punched.

Size Adjustment

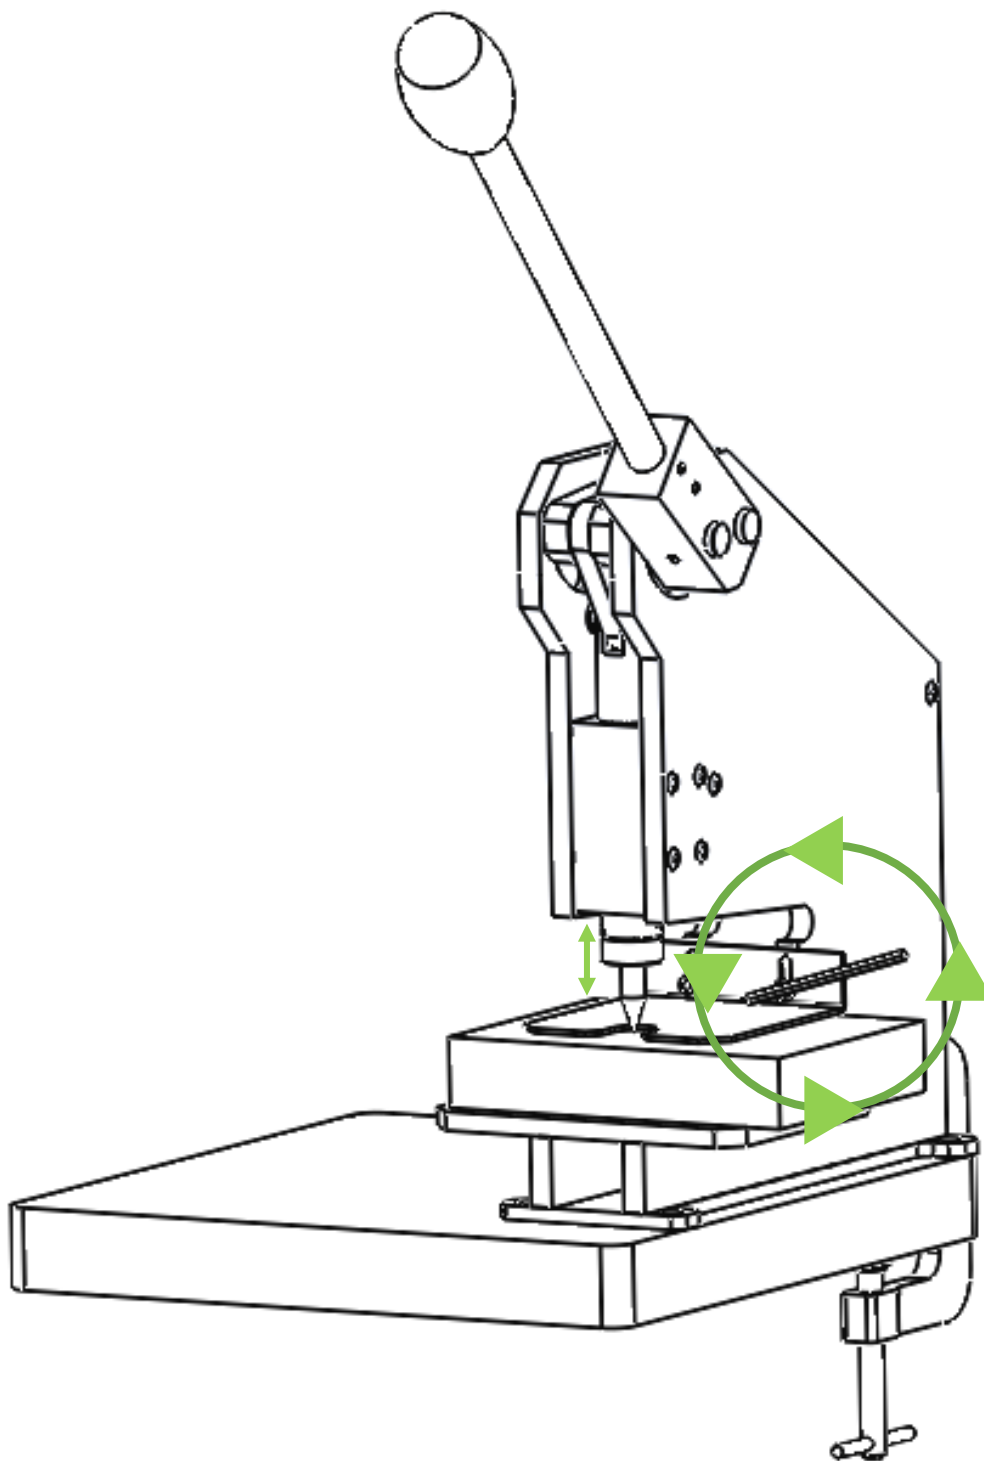

Note

If the HDD to be punched does not fit, loosen the fixing bolt of the HDD stop plate using 4mm L-Wrench. Adjust the plate to the desired height, tighten the bolts again to fix it in place.

Specifications are subject to change without notice.